FLEX Power Supplies 1, 2 and 3 Phase (5 – 12 – 48Vdc)



Thank you for having chosen one of our products for your work. We are certain the ADEL System Power Supplies will meet your application requirements.

Application

Application
The power supplies FLEX Series can be used in areas from extreme industrial environment, and complies with the latest technical standard. Before working with the unit, read these instructions carefully and completely. All these power supplies are single output, IP20, have Mounting DIN Rail IEC 60715/TH35. Class 1 isolation devices suitable for SELV and PEILV solutions.

Safety and warning notes

WARNING – Explosion Hazard Do not disconnect Equipment unless power has been switched off or the area is known to be non-hazardous.

MRNING – Syndroid up to Individual Syndroid Synd


Connection:

on: The following cable cross-sections may be us

	Solid (mm²)	Stranded (mm²)	AWG	Torque (Nm)	Stripping Length	Power Supply
Input:	0.2 – 2.5	0.2 - 2.5	24 – 14	0.5 – 0.6 Nm	7 mm	Others
	4.0	6.0	30 – 10	0.8 – 1.0 Nm	7 mm	Flex 500 series
Output:	0.2 - 2.5	0.2 - 2.5	24 – 14	0.5 – 0.6 Nm	7 mm	Others
	4.0	6.0	30 – 10	0.8 – 1.0 Nm	7 mm	Flex 500 series
Signal:	0.2 - 2.5	0.2 - 2.5	24 – 14	0.5 – 0.6 Nm	7 mm	Others
	4.0	6.0	30 – 10	0.8 – 1.0 Nm	7 mm	Flex 500 series

The connection is made by the screw type 2.5 mm² (FLEX60.90-170-280 series) or 4.0 mm² (FLEX500 series) terminal blocks. Use only copper cables that are designed for operating temperatures of > 75 °C. Wiring terminal shall be marked to indicate the proper connection for the power supply.

Input:					
FLEXxxxxxA series	1 Phase Switching Power Supplies	L, N, PE 🖶 .			
FLEXxxxxxB series	1Phase Switching Power Supplies	L, N, PE .			
FLEXxxxxxB series	2 Phase Switching Power Supplies	L1, L2, PE ⊕.			
FLEX500xxB series	3 Phase Switching Power Supplies	L1, L2, L3, PE ⊕.			
Output:	Nominal Voltage (Vdc) is made via the	(+), (-).			



Signalling:

Red led (Dc ok) status:	Jumper Setting
Output voltage OK: Lights up permanently	Hiccup Mode / Manual Reset / Continuous Mode
Switch off, in overload and short circuit conditions	Manual Reset / Continuous Mode
Blink, in overload and short circuit conditions	Hiccup Mode

Parallel Connection, to Increase Output Power:

- Made parallel connection with same model of power supply to increase the output power.

 Adjust the output approximately to the same value (± 20mV)
- applying 1-2 A load to all devices output before connecting them in parallel.
- Easy parallel connections Jumper. In FLEX280xxX and FLEX500xxX for more power, you must change position of the jumper to enable parallel connection. In this mode you can put in parallel up to 4 power supply








Parallel connection Redundancy:

Power supplies can be paralleled for 1+1 redundancy to obtain a higher system availability. Redundant systems require a certain amount of extra power to support the load in case one power supply unit fails. The simplest way is to put two FLEX power supplies in parallel. In case one power supply unit fails, the other one is automatically able to support the load current without any interruption. This simple way to build a redundant system has two major disadvantages:


- The faulty power supply can not be recognized. The red LED will still be ON since it is reverse-powered from the other power supply. It does not cover failures such as an internal short circuit in the secondary side of the power supply. In such a virtually nearly impossible - case, the defective unit becomes a load for the other power supplies and the output voltage can not be maintained any more.

This can only be avoided by utilizing decoupling diodes which are included in the Redundancy Module MR220. Recommendations for building redundant power systems:
a) Use separate input fuses for each power supply.
b) Monitor the individual power supply units. A DC-Red led and Power Good Contact are already included on FLEX power supplies. This feature reports a faulty unit; see power Good Section for any technical detail.
c) When possible, connect each power supply to different phases or circuits.



Serial connection:

- a) It is possible to connect as many units in series as needed, providing the sum of the output voltage does not exceed 150Vdc.
- exceed 150/vdc. b) Voltages with a potential above 60/vdc are not SELV any more and can be dangerous. Such voltages must be installed with a protection against touching, c) For serial operation use power supplies of the same
- type.
 d) Earthing of the output is required when the sum of the output voltage is above 60Vdc.
- output votage is above ovvoir.
 e) Keep an installation clearance of 15mm (left/right) between two power supplies and avoid installing the power supplies on top of each other. Note: Avoid return voltage (e.g. from a decelerating motor or battery) which is applied to the output terminals.



Power Good Output Function (No for FLEX60xxX)

Output are used for preventive function monitoring of the power supply. An electrically isolated signal contact is available. The signal contact Closes when output power is Nominal Voltage Threshold Voltage


11Vdc ±5° 42Vdc ±5° 12Vdc
 48Vdc
 42Vdc ±5%

 This feature is particularly useful in redundant applications.

 Power Good Contact rating:

 Max. DC1: 30 Vdc 1 A; AC1: 60 Vac 1A
 Resistive load (EN 60947-4-1)

 Min.:1mA at 5 Vdc
 Min permissive load




Protection:

On the primary side: the device is equipped whit an internal fuse; follow the next page table. If the internal fuse is blown (fails opens), it is most probable that there is a fault in the device. If this failure occurs, the device must be checked in the factory. Caution: in two phase Input models, Double pole / Neutral Fusings On the secondary side: the devices are electrically protected against: Over Load, Over Voltage Output (typ.30 Vdc for FLEX 12Vdc, typ. 72Vdc for FLEX 48Vdc), and Short circuit automatically.

Short circuit and overload Protections Mode:

Depending on the users application loads, the ADEL Flex Line offers three types of protection modes which are available by removing the plastic window and changing the Jumper to the desired setting as shown below: ((No Settings jumper for FLEX60xXA only Continuous Mode Condition)

1) HICCUP MODE (default factory Jumper setting) The General purpose mode, used for normal load.
In case of short-circuit or overloading, the output current is interrupted. The device tries again to re-establish output voltage and normal condition about every 2 second till the problem is cleared.



2) MANUAL RESET (manual Restart by Operator)
This protection mode is particularly suggested
and in applications where safety procedures
require that reset be carried out only by an

authorized person.
In case of short-circuit or overload, the output current is interrupted. In order to restart the output it is necessary to switch-off the input circuit for about 1 - 5 minutes.




3) CONTINUOUS OUTPUT MODE



The output of the device is electrically protected against overload and short circuit. For the nominal voltage and nominal current at temperature condition, please see technical data. The device can supply at the nominal Current without switching off. As the overload increases, the output voltage is reduced until zero.

Temperature Ratings

Surrounding air temperature 50 °C for FLEX60xxA, for the other 60°C. At the temperature of 70°C the output current will be 75% - 50% of In. The equipment does not switch of in case of ambient temperature above 70°C or thermal overload. The devices are protected for Over temperature conditions "worst case"; in this situations the device Shut-down the output and automatic restart when temperature inside fall.



Standards and Certification

Electrical Safety:
Assembling device: UL508, IEC/EN 60950 (VDE 0805) and EN 50178 (VDE 0160).

Installation according: IEC/EN 60950.

Input / Output separation: SELV EN 60950-1 and PELV EN 60204-1. Double or reinforced insulation.

EMC Standards Immunity:

EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5.


EMC Standards Emission:


EN 61000-6-4, EN 61000-3-2

Standards Conformity:
Safety of Electrical Equipment Machines: EN 60204-1.


The CE mark in According to EMC 2014/30/UE and Low voltage directive 2014/35/UE UL Listed 508

Rail Mounting:





Dimension and Lay-out:

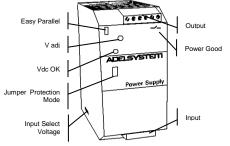





FLEX power supply 1Phase	5Vdc	12Vdc			48Vdc		
TECHNICAL DATA	and the second s	COLUMN TO THE PARTY OF THE PART	Harman Market Ma	THE PARTY OF THE P	Tracking Co. Track	The second secon	TOTAL OF THE STATE
	FLEX6005A	FLEX6012A	FLEX17012A	FLEX28012A	FLEX17048A	FLEX28048A	FLEX50048A
Model INPUT DATA		FLEXOUIZA		FLEAZOUIZA	FLEXI/U40A		FLEA30046A
	2 x Vac	2 x Vac		2 x Vac			
Nominal Input Voltage / Tensione d'ingresso nominale Vac	115 – 230 Vac	115 – 230Vac	115 – 230Vac Input selectable	115 – 230Vac Input selectable	Input selectable	Input selectable	Input selectable
Input Voltage Range / Campo di funzionamento Vac	90 – 264	90 – 264Vac	90 – 135Vac 180 – 264Vac	90 – 135Vac 180 – 264Vac	90 – 135Vac 180 – 264Vac	90 – 135Vac 180 – 264Vac	90 – 135Vac 180 – 264Vac
Inrush Current (Vn and In Load) I2t / Corrente di Inserzione	≤7 A ≤5 msec.	≤11 A ≤ 5msec	≤ 16 A ≤ 5msec	≤ 16 A ≤ 5msec	≤11 A ≤ 5msec	≤ 16 A ≤ 5msec	≤ 16 A ≤ 5msec
Frequency /Frequenza di Ingresso	47 – 63 Hz ±6%						
Input Current (230 – 400 – 480 Vac) / Assorbimento	0.5 - 0.25 A	1 – 0.7 A	2.8 – 1.3 A	3.3 – 2.2 A	2.8 – 1.3 A	3.3 – 2.2 A	8.5 – 4.2 A
Internal Fuse / Fusibile Interno (non sostituibile)	4 A	4 A	4 A	6.3 A	4 A	6.3 A	10 A
External Fuse (recommended)/ Fusibile Esterno raccomandato	6 A (MCB curve B)	6 A	10 A	16 A	10 A	16 A	16 A
OUTPUT DATA							
Output Voltage Factory Setting ±3%/ Tensione di Uscita – (Vn)	5 Vdc	12Vdc	12Vdc	12Vdc	48Vdc	48Vdc	48Vdc
Adjustment range / Campo di regolazione (Vadj)	4.75 - 5.25 Vdc	10 - 15.5Vdc	10 - 14Vdc	10 – 14Vdc	41 – 55Vdc	41 – 55Vdc	41 – 55Vdc
Start up with capacitive load / Start up con carichi capacitive	≤ 50.000µF	≤50.000μF	≤50.000μF	≤50.000μF	≤50.000μF	≤50.000μF	≤50.000μF
Turn-On delay after applying mains voltage	1 sec. (max)						
Continuous Current at Vn < 40°C (In)	5 A	4 A (115) 6A (230)	14 A	20 A	3.75 A	7.0 A	12.0 A
Continuous Current at Vn < 50°C (In)	5 A	3 A (115) 5A (230)	12 A	18 A	3.0 A	6.0 A	11.0 A
Continuous Current at Vn < 60°C (In)	5 A	2 A (115) 3A (230)	10 A	16 A	2.5 A	5.0 A	10.0 A
Short circuit current (Icc) / Corrente di corto circuito	10 A	10 A	20 A	30 A	7.5 A	15 A	30.0 A
Hold-up Time (min. Vac) Vn /Tempo di arresto	Typ. 20 msec						
Residual Ripple / Ripple Residuo	≤ 80 mV _{pp}						
Efficiency / Rendimento tipico (al 50% Vn)	≥ 82 %	≥ 88 %	≥91 %	≥ 92 %	≥91 %	≥ 91 %	≥ 92 %
Over temperature Protection / Protezione in Temperatura	Yes. Shut-down output and automatic restart	Shut-down output and automatic restart			Shut-down output and automatic restart		
Short-circuit protection / Protezione contro il C.C.	Continuous Mode	Continuous Mode	Continuous Mode 1° Hiccup Mode ; 2° Continuous Mode ; 1° Hiccup Mode ; 1° Hicc		Mode ; 2° Continuous Mode	; 3° Manual Reset	
Dissipation power load max (W) / Potenza dissipata	6	6	17	28	17	28	54
Over Load protection / Protezione sovraccarico	Yes						
Over Voltage Output protection (Internal Failure)	Yes (typ. 15 Vdc)	Yes(typ. 30Vdc)	Yes(typ. 35Vdc)	Yes(typ. 35Vdc)	Yes(typ. 72Vdc)	Yes(typ. 72Vdc)	Yes(typ. 72Vdc)
Parallel connection / Collegamento in parallelo	Yes	Yes	Yes	Easy parallel	Yes	Easy parallel	Easy parallel
Relay power good / Contatto in scambio per tensione non corretta	No	No	Yes	Yes	Yes	Yes	Yes
CLIMATIC DATA		•		•	•		
Ambient Temperature operation /	-25 - +70 °C						
Temperatura Ambiente di Lavoro							
Derating T ^a > . (In)	>60° 2.5% °C						
Ambient Temperature Storage / Temperatura max. Magazzino	-40 - +85 °C						
Humidity at 25 °C, no condensation / Umidità	95 % to 25 °C						
GENERAL DATA		•				·	
Isolation Voltage (IN / OUT) / Tensione di Isolamento (IN / OUT)	3000Vac						
Isolation Voltage(IN / PE)/Tensione di Isolamento(IN / Terra)	1605 Vac						
Isolation Voltage(OUT / PE)/Tensione di Isolamento (OUT/Terra)	500 Vac						
Protection Class (EN/IEC 60529)/ Protezione Classe	IP 20						
Reliability: MTBF IEC 61709	> 500 000 h						
Pollution Degree Environment	2	2	2	2	2	2	2
Connection Terminal Blocks Screw Type / Dimensione morsetti	2,5mm	2,5mm	2,5mm	2,5mm	2,5mm	2,5mm	4 mm
Protection class (with PE connected)	I	I	I	1	I	I	I
Dimension (w-h-d) / Dimensioni (l-h-p) mm	50x120x50	50x120x50	55x110x105	72x115x135	55x110x105	72x115x135	85x120x140
Weight / Peso	0.30 kg approx	0.30 kg approx	0.6 kg approx	0.77 kg approx	0.60 kg approx	0.77 kg approx	1.1 kg approx
Safety Standard Approval / Conformità e Approvazioni e	CE, UL 508						

All specification are subject to change without notice